

Control button remove key



This key is especially designed for removing Mastervolt control buttons. The weather-resistant operation button, made of polycarbonate composite, can be easily clicked onto the base switch. There are more than 60 different pictograms/symbols in stock. The buttons can be easily removed with this key.

Especificaciones